

## Changing the name of a telephone

### Begin the programming session

Jan 1 12:00PM Press **[\*]**.

Feature: Press **[\*][\*][2][8][8][5][4][4]**.

Password: RETRY Press **[2][8][8][4][8]**.

### Change the name of a telephone

Terminals&Sets▶ Press **[Show]**.

Show set:221 LIST Enter the internal number (DN) of the telephone or voice mail extension. In this example, the DN is 221.

If the set has already been given a name, it appears after DN: on the display.

221:221▶ Press **[Show]** then **[Next]**.

Name:221 CHANGE This is the name the display shows if you do not change it. Press **CHANGE**.

Decide what name you want to give to the telephone number.

Name:\_\_\_ --> Press the numeric dialpad button that has the first letter of the name until the display shows the letter you want.

Name:J BKSP --> Press **==>**.

Name:J... <-- BKSP --> Use the dialpad and **==>** until you have the entire name.

Name:JEAN B <-- BKSP --> Press **[Next]** to use the name you have entered.

The name can be up to seven characters long, including spaces.

Name:JEAN B CLR CHANGE Press **[\*]** to end your session.

You can press **[Heading]** once to continue programming this telephone, or press **[Heading]** twice to return to the Terminals&Sets heading.

End of session